

Pinotaur Board Layout

Switch 6 Switch 4 Switch 2 Switch 0

Switch 7 Switch 5 Switch 3 Switch 1

GI 1 GI 0

Opto Section

3	2	1	0
7	6	5	4
11	10	9	8
15	14	13	12



Sol Bank 0

Servo 0	Servo 1	Servo 2	Servo 3	Servo 4	Servo 5



Sol Bank 1

RGB 1

RGB 2

Servo (Fast Blow) 3 Amp



Sol Bank 2

3 amp

3 amp

3 amp

Solenoid

Fuses (Slow Blow)

*5 amp slow blow may be used here if you need to up fuse.

Main 12v (Fast Blow) 5 Amp

5 Amp

8 Amp

Main 5v (Fast Blow)

Solenoid Power

Cabinet Bank 1

Cabinet Bank 0

USB

Board Power